

LBO - Lithium Triborate (LiB_3O_5)

Introduction

Lithium Triborate (LiB_3O_5 or LBO) is an excellent nonlinear optical crystal discovered and developed by FJIRSM, CAS (Fujian Institute of Research on the Structure of Matter, Chinese Academy of Sciences). LBO crystal and its NLO devices now are produced, manufactured and marketed by CASTECH, Inc (CASTECH).

CASTECH's LBO is featured by

- Wide range of transparency (160-2600 nm, see Figure 1)
- High optical homogeneity ($\delta n \approx 10^{-6}/\text{cm}$), and being free of inclusion
- Relatively high SHG efficiency (about 3 times that of KDP)
- High damage threshold
- Wide acceptance angle and small walk-off
- Type I and type II non-critical phase matching (NCPM) in a wide wavelength range
- Spectral NCPM near 1300 nm

CASTECH offers

- Strict quality control
- Large crystal size, aperture up to $55 \times 55 \text{ mm}^2$ and length up to 60 mm
- AR-coating, mounts and re-working services
- A large quantity of crystals in stock
- Fast delivery (15 days for polished only, 20 days for AR-coated)

Basic Properties

Table 1. Chemical and Structural Properties

Crystal Structure	Orthorhombic, Space group $\text{Pna}2_1$, Point group $\text{mm}2$
Lattice Parameter	$a = 8.4473 \text{ \AA}$, $b = 7.3788 \text{ \AA}$, $c = 5.1395 \text{ \AA}$, $Z = 4$
Melting Point	About $834 \text{ }^\circ\text{C}$
Mohs Hardness	6 Mohs
Density	2.47 g/cm^3
Thermal Conductivity	3.5 W/m/K
Thermal Expansion Coefficients	$\alpha_x = 10.8 \times 10^{-5}/\text{K}$, $\alpha_y = -8.8 \times 10^{-5}/\text{K}$, $\alpha_z = 3.4 \times 10^{-5}/\text{K}$

Table 2. Optical and Nonlinear Optical Properties

Transparency Range	160-2600 nm	
SHG Phase Matchable Range	551-2600 nm (Type I)	790 - 2150 nm (Type II)
Therm-optic Coefficient (/°C, λ in μm)	$dn_x/dT = -9.3 \times 10^{-6}$ $dn_y/dT = -13.6 \times 10^{-6}$ $dn_z/dT = (-6.3 - 2.1\lambda) \times 10^{-6}$	
Absorption Coefficients	<0.1%/cm @ 1064 nm , < 0.3%/cm @ 532 nm	
Angle Acceptance	6.54 mrad·cm (Φ, Type I, 1064 SHG)	15.27 mrad·cm (θ, Type II, 1064 SHG)
Temperature Acceptance	4.7°C·cm (Type I, 1064 SHG)	7.5°C·cm (Type II, 1064 SHG)
Spectral Acceptance	1.0 nm·cm (Type I, 1064 SHG)	1.3 nm·cm (Type II, 1064 SHG)
Walk-off Angle	0.60 ° (Type I, 1064 SHG)	0.12 ° (Type II, 1064 SHG)
NLO Coefficients	$d_{\text{eff}}(\text{I}) = d_{32} \cos\Phi$ (Type I in XY plane) $d_{\text{eff}}(\text{I}) = d_{31} \cos^2\theta + d_{32} \sin^2\theta$ (Type I in XZ plane) $d_{\text{eff}}(\text{II}) = d_{31} \cos\theta$ (Type II in YZ plane) $d_{\text{eff}}(\text{II}) = d_{31} \cos^2\theta + d_{32} \sin^2\theta$ (Type II in XZ plane)	
Non-vanished NLO Susceptibilities	$d_{31} = 1.05 \pm 0.09$ pm/V $d_{32} = -0.98 \pm 0.09$ pm/V $d_{33} = 0.05 \pm 0.006$ pm/V	
Sellmeier Equations (λ in μm)	$n_x^2 = 2.454140 + 0.011249 / (\lambda^2 - 0.011350) - 0.014591\lambda^2 - 6.60 \times 10^{-5}\lambda^4$ $n_y^2 = 2.539070 + 0.012711 / (\lambda^2 - 0.012523) - 0.018540\lambda^2 + 2.00 \times 10^{-4}\lambda^4$ $n_z^2 = 2.586179 + 0.013099 / (\lambda^2 - 0.011893) - 0.017968\lambda^2 - 2.26 \times 10^{-4}\lambda^4$	

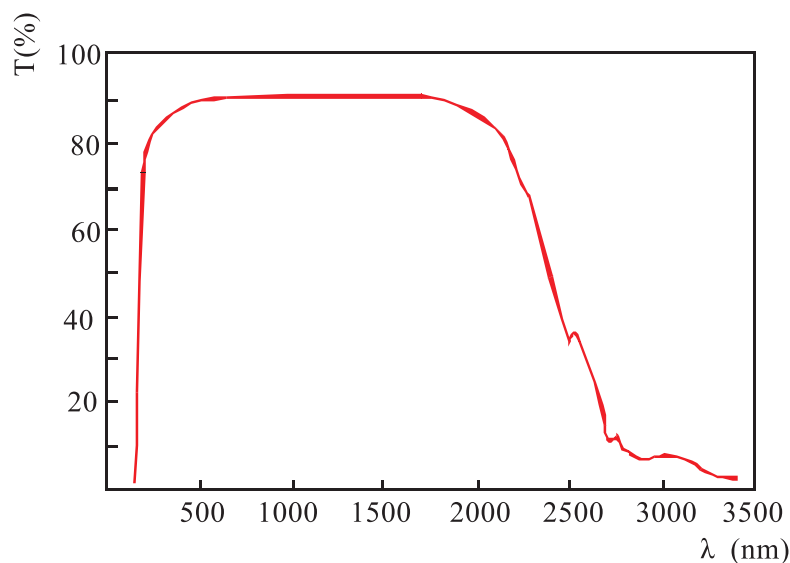


Figure 1. Transparency curve of LBO

NLO Crystals

SHG and THG at Room Temperature

LBO is phase matchable for the SHG and THG of Nd:YAG and Nd:YLF lasers, using either type I or type II interaction. For the SHG at room temperature, type I phase matching can be reached and has the maximum effective SHG coefficient in the principal XY and XZ planes (see Fig. 2) in a wide wavelength range from 551nm to about 2600 nm (the effective SHG coefficient see Table 2).

The optimum type II phase matching falls in the principal YZ and XZ planes (see Fig.2), (the effective SHG coefficient see Table 2).

SHG conversion efficiencies of more than 70% for pulse and 30% for cw Nd:YAG lasers, and THG conversion efficiency over 60% for pulse Nd:YAG laser have been observed by using CASTECH's LBO crystals.

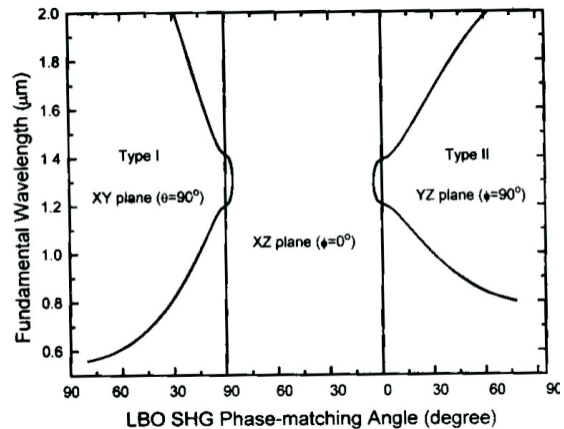


Figure 2. SHG tuning curves of LBO

Applications for SHG and THG at Room Temperature

- More than 480 mW output at 395 nm is generated by frequency doubling a 2 W mode-locked Ti:Sapphire laser (<2 ps, 82 MHz).
- Over 80 W green output is obtained by SHG of a Q-switched Nd:YAG laser in a type II 18 mm long LBO crystal.
- The frequency doubling of a diode pumped Nd:YLF laser (>500 μJ @1047 nm, <7 ns, 0-10 KHz) reaches over 40% conversion efficiency in a 9 mm long LBO crystal.
- The VUV output at 187.7 nm is obtained by sum-frequency generation.
- 2 mJ/pulse diffraction-limited beam at 355 nm is obtained by intracavity frequency tripling a Q-switched Nd:YAG laser.

Non-Critical Phase Matching of LBO

As shown in Table 3, Non-Critical Phase Matching (NCPM) of LBO is featured by no walk-off, very wide acceptance angle and maximum effective coefficient. It promotes LBO to work in its optimal condition. SHG conversion efficiency of more than 70% for pulse and 30% for cw Nd:YAG lasers have been obtained, with good output stability and beam quality.

As shown in Fig.3, type I and type II non-critical phase matching can be reached along X-axis and Z-axis at room temperature, respectively.

CASTECH develops an assembly of oven and temperature controller for NCPM applications. Please refer to Page 68 for more technical data.

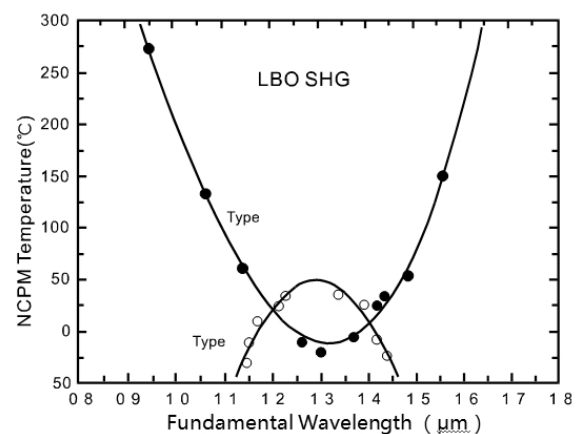


Figure 3. NCPM temperature tuning curves of LBO

Table 3. Properties of type I NCPM SHG at 1064 nm

NCPM Temperature	148 °C
Acceptance Angle	52 mrad·cm
Walk-off Angle	0
Temperature Bandwidth	4 °C·cm
Effective SHG Coefficient	$2.69 \times d_{36}(\text{KDP}) = 1.18 \text{ pm/V}$

Applications for NCPM

- Over 11 W of average power at 532 nm was obtained by extra-cavity SHG of a 25 W Antares mode-locked Nd:YAG laser (76 MHz, 80 ps).
- 20 W green output was generated by frequency doubling a medical multi-mode Q-switched Nd:YAG laser. Higher green output is expected with higher input power.

LBO's OPO and OPA

LBO is an excellent NLO crystal for OPOs and OPAs with a widely tunable wavelength range and high powers. The OPO and OPA which are pumped by the SHG and THG of Nd:YAG laser and XeCl excimer laser at 308 nm have been reported. The unique properties of type I and type II phase matching as well as the NCPM leave a large room in the research and applications of LBO's OPO and OPA. Fig. 4 shows the calculated type I OPO tuning curves of LBO pumped by the SHG, THG and FOHG of Nd:YAG laser in XY plane at the room temperature. And Fig. 5 illustrates type II OPO tuning curves of LBO pumped by the SHG and THG of Nd:YAG laser in XZ plane.

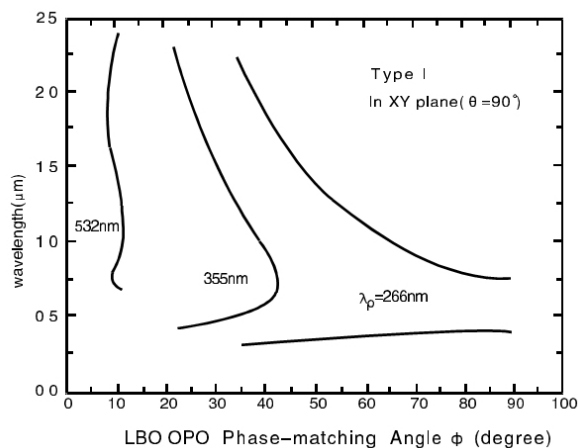


Figure 4. Type I OPO tuning curves of LBO

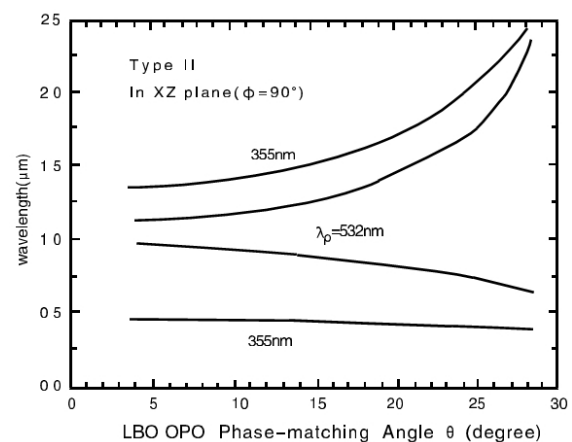


Figure 5. Type II OPO tuning curves of LBO

NLO Crystals

Applications for OPO and OPA

- 540-1030 nm tunable wavelength range with a quite high overall conversion efficiency has been obtained with OPO pumped at 355 nm.
- Type I OPA pumped at 355 nm with the pump-to-signal energy conversion efficiency of 30% has been reported.
- Type II NCPM OPO pumped by a XeCl excimer laser at 308 nm has achieved 16.5% conversion efficiency, and moderate tunable wavelength ranges can be obtained with different pumping sources and temperature tuning.
- By using the NCPM technique, type I OPA pumped by the SHG of a Nd:YAG laser at 532 nm was also observed to cover a wide tunable range from 750 nm to 1800 nm by temperature tuning from 106.5 °C to 148.5 °C.
- By using type II NCPM LBO as an optical parametric generator (OPG) and type I critical phase-matched BBO as an OPA, a narrow linewidth (0.15 nm) and high pump-to-signal energy conversion efficiency (32.7%) was obtained when it is pumped by a 4.8 mJ, 30 ps laser at 354.7 nm. Wavelength tuning range from 482.6 nm to 415.9 nm was covered either by increasing the temperature of LBO or by rotating BBO.

LBO's Spectral NCPM

Not only the ordinary non-critical phase match (NCPM) for angular variation but also the non-critical phase matching for spectral variation (SNCPM) can be achieved in the LBO crystal. As shown in Fig. 2, the phase matching retracing positions are $\lambda_1 = 1.31 \mu\text{m}$ with $\theta = 86.4^\circ$, $\Phi = 0^\circ$, for Type I and $\lambda_2 = 1.30 \mu\text{m}$ with $\theta = 4.8^\circ$, $\Phi = 0^\circ$, for Type II. The phase matching at these positions possess very large spectral acceptances $\Delta\lambda$ at λ_1 and λ_2 , which are 57 nm·cm and 74 nm·cm respectively, much larger than that of other NLO crystals. These spectral characteristics are very suitable for doubling broadband coherent radiations near 1.3 μm , such as those from some diode lasers, and some OPA/OPO output without linewidth-narrowing components.

AR-coating

CATECH provides the following AR-coatings:

- Dual Band AR-coating (DBAR) of LBO for SHG of 1064 nm;
Frequency-tripled antireflection coating of LBO for THG of 1064 nm
- Low reflectance ($R < 0.2\%$ @1064 nm, $R < 0.5\%$ @532 nm, $R < 0.5\%$ @355 nm);
super low reflectivity of $R < 0.05\%$ @1064 nm and $R < 0.1\%$ @532 nm is available upon request
- Broad Band AR-coating (BBAR) of LBO for SHG of tunable lasers
- IBS, IAD coating methods are available upon request
- High damage threshold
- Long durability
- Other coating are available upon request

LBO's Parameters

Table 4. Specifications

Dimension Tolerance	$(W \pm 0.1 \text{ mm}) \times (H \pm 0.1 \text{ mm}) \times (L + 0.5 / - 0.1 \text{ mm}) \times (L \geq 2.5 \text{ mm})$ $(W \pm 0.1 \text{ mm}) \times (H \pm 0.1 \text{ mm}) \times (L + 0.1 / - 0.1 \text{ mm}) \times (L < 2.5 \text{ mm})$
Clear Aperture	Central 90% of the diameter
Surface Quality (Scratch/Dig)	10/5 to MIL-PRF-13830B
Flatness	$\leq \lambda/8$ @633 nm
Transmitted Wave-front Distortion	$\leq \lambda/8$ @633 nm
Parallelism	20 arc sec
Perpendicularity	≤ 15 arc min
Angle Tolerance	$\Delta\theta \leq 0.25^\circ, \Delta\Phi \leq 0.25^\circ$
Chamfer	$\leq 0.2 \text{ mm} \times 45^\circ$
Chip	$\leq 0.1 \text{ mm}$
Damage Threshold	$> 10 \text{ GW/cm}^2$ @1064 nm, 10 ns, 10 Hz (polished only) $> 1 \text{ GW/cm}^2$ @1064 nm, 10 ns, 10 Hz (AR-coated) $> 0.5 \text{ GW/cm}^2$ @532 nm, 10 ns, 10 Hz (AR-coated)
Quality Warranty Period	One year under proper use.

Notes

- LBO has a low susceptibility to moisture. Users are advised to provide dry conditions for both the use and preservation of LBO.
- Polished surfaces of LBO require precautions to prevent any damage.
- CASTECH engineers can select and design the best crystal for you, based on the main parameters of your laser, such as energy per pulse, pulse width and repetition rate for a pulsed laser, power for a cw laser, laser beam diameter, mode condition, divergence, wavelength tuning range, etc.
- For thin crystals, CASTECH can provide with free holders.